

# FORKS MOVE RAILCARS SAFELY

### **SAS RAILCAR COUPLER** FOR WHEEL LOADERS

Are you having trouble moving your railcars safely and efficiently?



#### MOVE RAILCARS SAFELY AND WITHOUT DAMAGE

#### IMPROVE YARD SAFETY:

- Provides increased operator control.
- Securely attaches to railcar hitch for moving either forward or reverse.
- Operator control is improved as compared to simply pushing railcar or moving with chain.
- Enhanced coupling safety with upper and lower shelf to prevent vertical slide off.

#### SIMPLE DURABLE DESIGN:

- Made of heavy structural steel.
- No assembly required, put to use immediately.
- Available for any two yard and larger wheel loader.
- Move all types of railcars without damage to sides or undercarriage.
- Using coupler prevents damage to railcar, forks or bucket of loader.

#### SLIDING AND FIXED DESIGNS AVAILABLE:

- Sliding<sup>[1]</sup> RR coupler allows loader tires to offset on RR tracks or for use on curved tracks.
  - 72.5" wide carriage provides 50" of side to side slide adjustment.
  - Provides easier steering with the wheel loader articulation.
- **Stationary**<sup>[2]</sup> Railcar coupler for wheel loaders which have wheel base wide enough to straddle tracks. Provides confident alignment to RR hitch and optimum control of placement.
- Lever Release Options:
  - •Mechanically operated coupler locking lever standard, no hydraulics to maintain or repair.
  - •Hydraulically releasable locking lever. Control easily from cab—requires auxilary hydrauilic function.

#### EMERGENCY AIR BRAKE ASSIST OPTION (Patented):

- Provides safety stopping ability to enhance wheel loader's standard brakes<sup>[3]</sup>.
- Air compressor is VMAC G30 gas internal combustion engine<sup>[4]</sup> integrated on board SAS Railcar coupler.
- Operator control panel in cab for engine shut off, pressure monitoring & e-stop, detachable hoses/cable.
- No specialty hydraulic installation. No bulkly installation on rear of machine prone to backup damage.


#### ENGAGE RAILCAR PARKING BRAKE FROM SAFETY OF GROUND OPTION:


• Brake-stick to engage / disengage manual railcar parking brake without crawling up on railcar.


#### **BEST SUITED FOR:**

• 18,000 to 90,000 lbs. curb weight wheel loader, tractor or similar machine operating on flat level industrial spur track. www.SASFORKS.com Form# Railcar Coupler 1/3/2023 © 2023 SAS of Luxemburg, LLC (USA)

## **SAS RAILCAR COUPLER** FOR WHEEL LOADERS

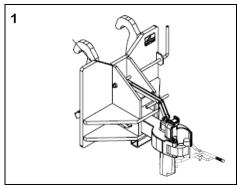

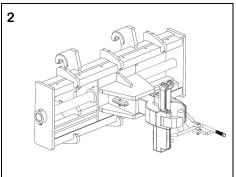

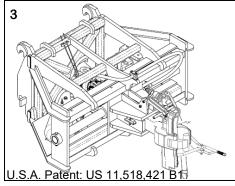

•	OOOI EEN I ON WITE		UADL		
	Item	Stand	ards	<b>Option</b>	
	Description	1	2	3	
	A. Model	Fixed	Slider	Slider w/Air	
	B. Upper & lower shelf for safety	Yes	Yes	Yes	
	C. Heavy structural design	Yes	Yes	Yes	
	D. Paint color safety yellow	Yes	Yes	Yes	
	E. Operator & Safety manual	Yes	Yes	Yes	
	F. Railcar coupler side movement	No	Yes	Yes	
]	G. Emergency air brake assist	n/a	n/a	Yes <sup>[4]</sup>	
	H. Side movement	n/a	50"	50"	
	I. Carriage width	42"	72.5"	72.5"	
	J. Estimated weight (lbs.)	2,400	2,750	3,950	
	Options:				
	K. Release options:				
	Manual release	Yes	Yes	Yes	
	\ ' ' '	Yes/No	Yes/No	n/a	
	L. Air unit cab control panel <sup>[5]</sup> options:  Emergency air brake assist button n/a  n/a  Yes				
	Pressure monitor	n/a	n/a	Yes	
	Engine shut off <sup>[6]</sup>	n/a	n/a	Yes	
	M. Brake-stick wquick access stora	ge n/a	Yes/No	Yes/No	
	Customer Sign X:		Date:	/ /	
	Specifications subject to change as continuous product improvements as implemented.				
	<ul><li>[5] Control panel has generic mount, may require customer to make custom bracket for installation.</li><li>[6] Must start directly at compressor. Remote start from cab is not available.</li></ul>				
_	, , , , , , , , , , , , , , , , , , , ,				

[1&2] Non emergency stop air brake models have no connection to railcar brakes. Additional safety considerations: Wheel loader braking and traction may be insufficient for stopping rail car(s) in motion. Recommend implementing practice that would allow for applying railcar brakes, rail blocks, car stops or other safety measures to prevent runaway cars. [3] Gladhand properly connected to railcar with pre-operation psi & operator activation. [4] Air compressor equipped unit not for use in explosive or flammable environments, as heat or spark from engine may pose fire risk.

# Contact:

SAS Forks 133 Center Drive HWY 54 - PO Box 260 Luxemburg, WI 54217-0260 U.S.A.

Phone: 920-845-2307 Fax: 920-845-2309

Email: sales@sasforks.com

Website: www.sasforks.com



### **CONSIDERATIONS** Number of railcars to move at once? □1 □2 □

Flat level grade of track surface? □No □Yes Ballast area paved in area of use? □No Area of use in fire or explosion risk? □Yes □No MACHINE: Make\_\_\_\_\_ Model Curb Weight □kg Serial # Electrical system □12v □24v Existing 1 auxiliary spool □Yes □No

Attachment: □3 Pin, □4 Pin, □Quick Coupler: Series



Mfg

133 Center Drive Hwy 54 P.O. Box 260 Luxemburg, WI 54217 sasforks.com Phone: 877-727-3675 (877) SAS-FORK

BWQ#

